



Handset instructions TDH6

Operation of the desk

- Press «↑» to move the desk up;
- Press «↓» to move the desk down.

Setting the memory function

1. Place the desk up or down to the desired position;
2. Press «M» until the display flashes, then press «1» to save position 1;
3. Repeat the procedure to save the other positions. (4 memory positions in total)

The memory positions are not lost when the power is turned off.

Initialization of the system (reset)

1. Press and hold «↑» and «↓» until the frame has reached the lowest position;
2. Initialization is complete when you hear a beep.

CM or INCH

1. Press «1», «2» & «M» together for 5 seconds;
2. Then «C1» will flash on the display;
3. Press «1» for CM or press «2» for INCH.

Caution:

- This product must comply with the technical parameters (see label control box);
- Keep the product away from water and corrosion-resistant gas;
- Is there a problem with the product? Please contact the point of sale.

Locking the minimum height of the desk

1. Place the desk at the desired minimum height;
2. Press «↑» & «↓» at the same time;
3. Then press and hold «↓». Then press «↑» three times with another finger;
4. Finally there will be a beep, this means that the minimum height is set.

The minimum height lock can be removed by repeating the above steps.

Locking the maximum height of the desk

1. Place the desk at the desired maximum height;
2. Press «↑» & «↓» at the same time;
3. Then press and hold «↑». Then press «↓» three times with another finger;
4. Finally there will be a beep, this means that the maximum height is set.

The maximum height lock can be removed by repeating the above steps.

Caution:

- *This product must comply with the technical parameters (see label control box);*
- *Keep the product away from water and corrosion-resistant gas;*
- *Is there a problem with the product? Please contact the point of sale.*